

STORAGE

When not in use, allow it to cool down before folding, then gently fold the blanket and place back into the packing bag it arrived in. Make sure the blanket is dry before folding and packing it away. The blanket should be hung in a ventilated location to dry naturally. Do not use mothproofing agents on the blanket. Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used. Damage on the insulation material will cause safety problem. Do not crease the appliance by placing items on top of it during storage. The blanket should be store in a cool dry place.

Made in China



Sable&Fox

LUXURY ELECTRIC HEATED SUPER SOFT OVER BLANKET

User Manual

IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE USE

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of personal injury or damage to property, basic important safety instructions must be observed including the following:

- Read the instruction manual thoroughly and retain for future reference. Ensure before use you know how the electric blanket works & how to operate it.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the electric blanket is not in use or before cleaning.
- Always use the electric blanket from a power outlet of the voltage (A.C. only) marked on the rating label.
- Use only the type of controller marked on the rating label.
- Used as over blanket.
- Do not use if it is damp or wet.
- This blanket is not intended for medical use in hospitals.
- Do not use together with another heating appliance.
- When in use ensure the blanket & mains leads do not get trapped.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and seek specialist advice.
- If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must be returned to the manufacturer or his agent if the link has ruptured.
- The appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- The appliance must not to be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.

SYMBOL EXPLANATION

	Read the instructions for use		Do not insert pins		Do not tumble dry
	Do not bleach		Do not use folded or rucked		Do not iron
	Do not dry clean		Maximum washing temperature 30°C, mild process		Not to be used by very young children (0-3) years

OPERATING INSTRUCTIONS

This blanket is intended to be used as a "THROW" or "OVER BLANKET" and therefore should always be placed on top of an individual, not under them, or on the top of a bed sheet. It is not to be used as an "under blanket".

Connect the controller to the blanket (The blanket has a socket attached that the controller slots into) and ensure it is fully connected.

Ensure there is a mains supply is nearby and that when in use, the mains lead will not be in a position that could cause people to trip over it. When plugged into the mains supply, the controller must be within easy reach of the user.

USING THE BLANKET

For controller:



Please select the **High** option and set to the highest temperature setting (**H**) for 30-60 minutes before using. When using the blanket select the appropriate temperature for you. If you have been using the blanket for a long period of time or intend to go to sleep with it turned on, please select a lower temperature (**L** or **1**) to avoid overheating or discomfort.


- Pressing the **Temp** option will display the highest temperature of 7 for approximately 9 hours.
- Pressing the **Temp** option, the temperature will change from settings **L** or **1-7** over 9 hours.
- Pressing **Time** option, the auto switch-off will change from 1-9 hours.
- Pressing the **High** option, the temperature will display as **H**. This will automatically change to **L** approximately 1 hour later.

Fault introductions

If the temperature is displayed as **P**, please check if the electric blanket has been connected firmly and restart the blanket. If the fault cannot be removed, it means the internal connection of the electric blanket has a fault and you will need support from after-sales service. If the temperature is displayed as **E**, it means the electric blanket has an internal short circuit and will not work. If the temperature on the controller displays as **C** which means the controller has been overheated, please disconnect the blanket from the mains, and wait till the controller cools down then it is safe to use.

Connecting the Controller

To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and Do Not try and pull the controller plug out without lifting the locking tab as you will damage the socket.

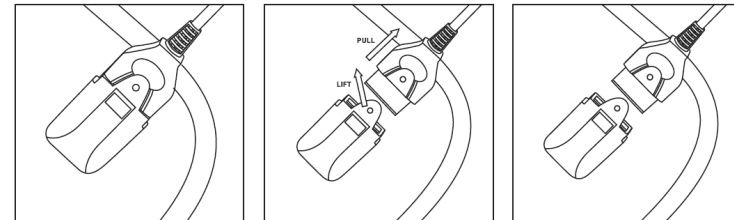

After use

When the blanket is not in use, please switch the controller to the off position; remove the plug from the power socket. If the blanket is not to be used for a long period of time, store the blanket in a cool and dry place.

CLEANING & MAINTENANCE

- When not in use and before cleaning the blanket, disconnect it from the mains.
- Disconnect the controller/s from the blanket.
- Do NOT immerse the controller/s in water or get them wet.
- Clean the surface of the cord with neutral detergent if the cord is dirty and wipe it dry with soft cloth.
- Do not submerge the controller in water or get it wet at all.
- Do not dry clean this blanket as it could damage the heating elements.
- Do not use industrial solvents such as benzene, kerosene or similar solvents to clean it.
- Machine washing of the blanket is possible; however, hand wiping it down will prolong the life of the blanket. To machine wash, remove the controller/s and place the blanket in a net bag and seal it. Use a small amount of detergent and set the washing machine to a "Delicate Wash" with a maximum temperature of 30°. When washed, remove the blanket from the net bag and drape it over a clothesline to dry. Do not use clothes pegs to secure it.
- Do NOT wring out the blanket.
- Do NOT dry using a tumble dryer.
- Do NOT iron the blanket.
- Do NOT dry the blanket in the sun.
- Do NOT connect it to the mains supply to dry it.
- Do NOT use an appliance such as a hair dryer to dry it.
- Allow the blanket to dry naturally.
- Do NOT use the blanket if it is damp or wet.
- Do not try to repair the blanket if faulty – have it looked at by a qualified person.
- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and seek specialist advice.
- If the mains lead or controller is damaged, do not open or attempt to repair them as they must be serviced by a qualified person.