


# ASSEMBLY INSTRUCTION

## ROCHELLE 4 PIECE RATTAN SOFA SET

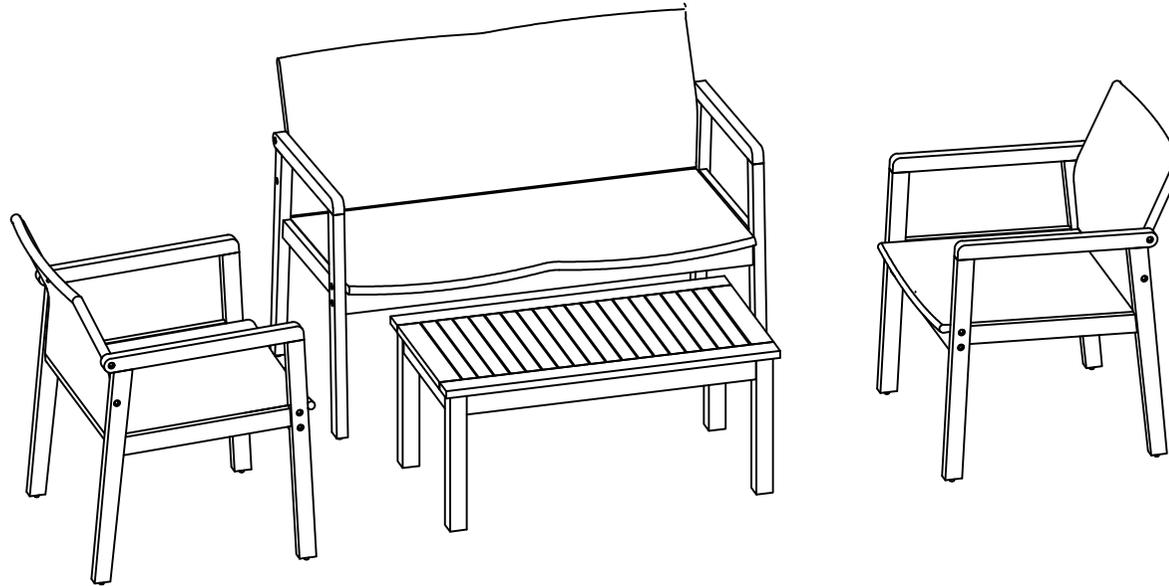


**PLU: 145796**

### Notice :

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

**Part List :**

**(A)** x 1

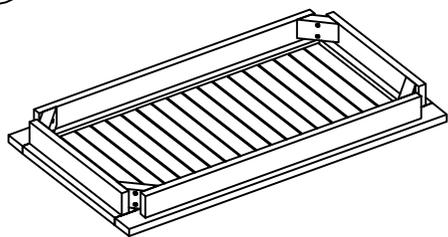


**Top Table**

**(B)** x 4




**Leg Table**

**(C)** x 3

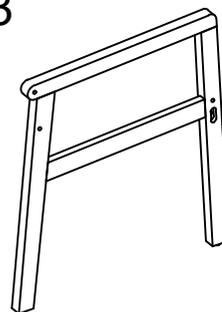


**Left Armrest**

**(D)** x 3

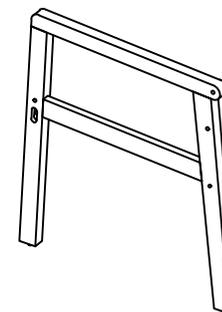


**Right Armrest**

**(E)** x 2

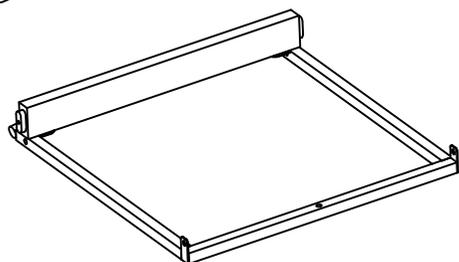


**Seat Chair**

**(F)** x 2

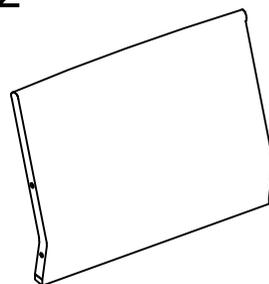


**Back Chair**

**(G)** x 1

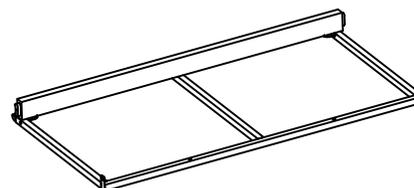

**Seat Bench**

**(H)** x 1

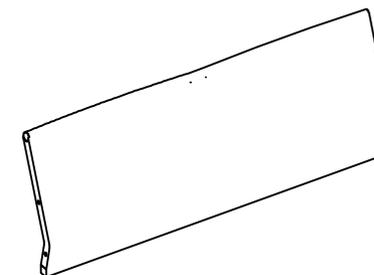

**Back Bench**


**Hardware :**

**(1)** x 8      **Extra (2 pcs)**



**Allen Bolt M8\*45**

**(2)** x 18      **Extra (2 pcs)**



**Allen Bolt M6\*45**

**(3)** x 4      **Extra (1 pc)**



**Allen Bolt M6\*40**

**(4)** x 6      **Extra (1 pc)**



**Screw Bolt M7\*70**

**(5)** x 6      **Extra (1 pc)**



**Screw Bolt M6\*20**

**(6)** x 10      **Extra (2 pcs)**




**Flat Washer**


**(7)** x 1      **Extra (1 pc)**




**Allen Key**

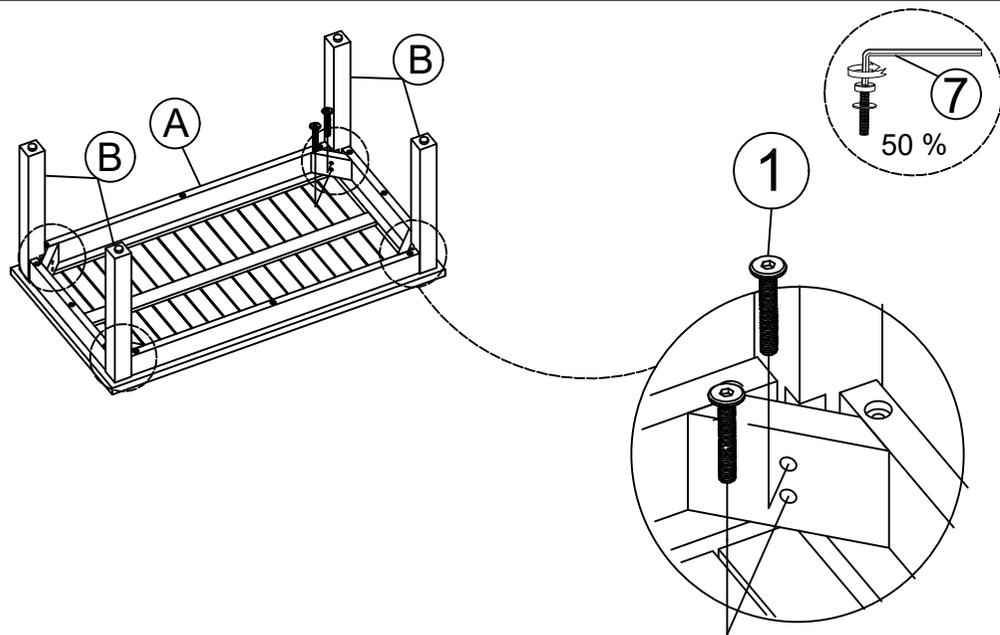

Step 1: Connect The Top Table (A) & Leg Table (B), tighten Bolt (1) with Allen Key (7).

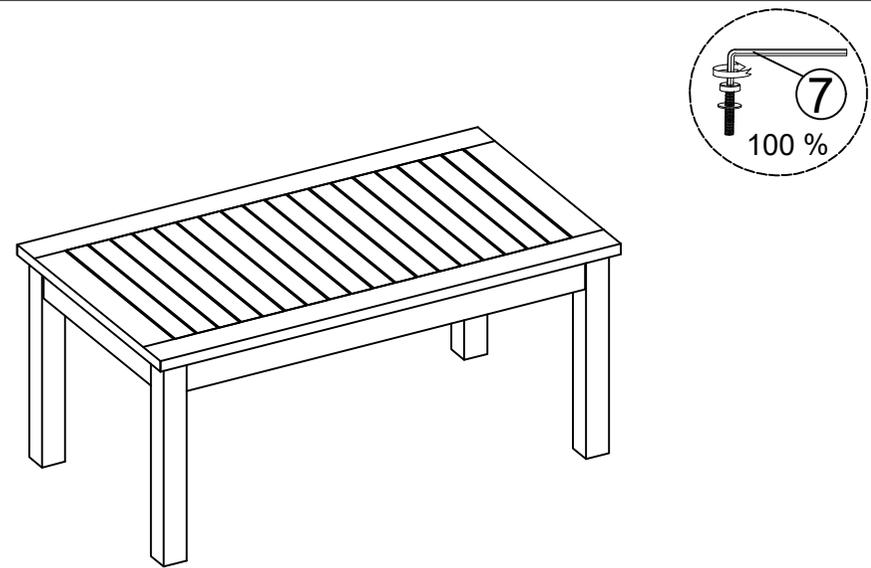


Step 2: Put the Table upright and make sure all legs are level, then firmly tighten Bolts with Allen Key (7) to finish Table.

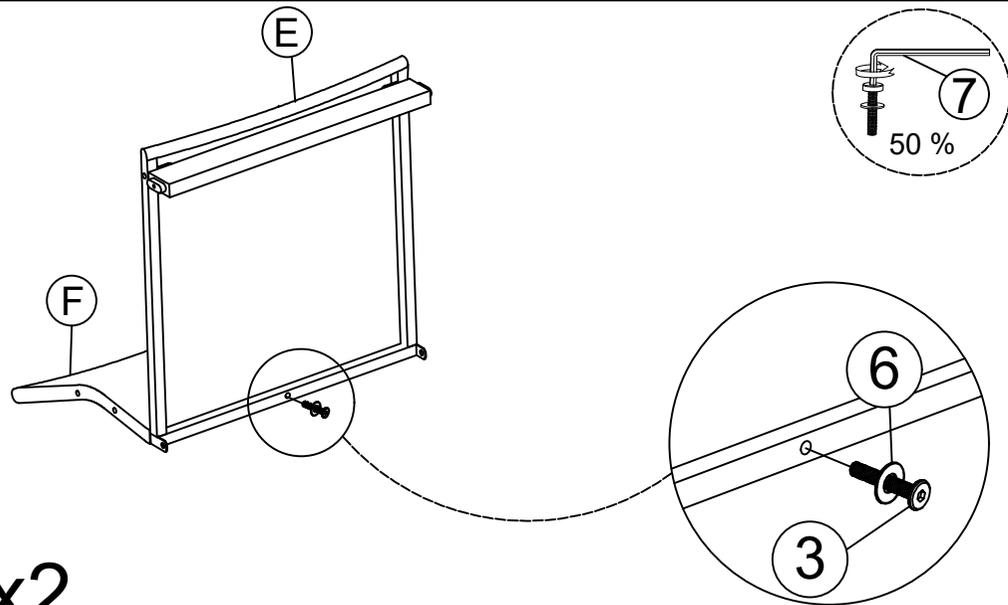


x2

Step 3: Connect The Seat Chair (E) & Back Chair (F), tighten Bolt (3), Flat Washer (6) with Allen Key (7).

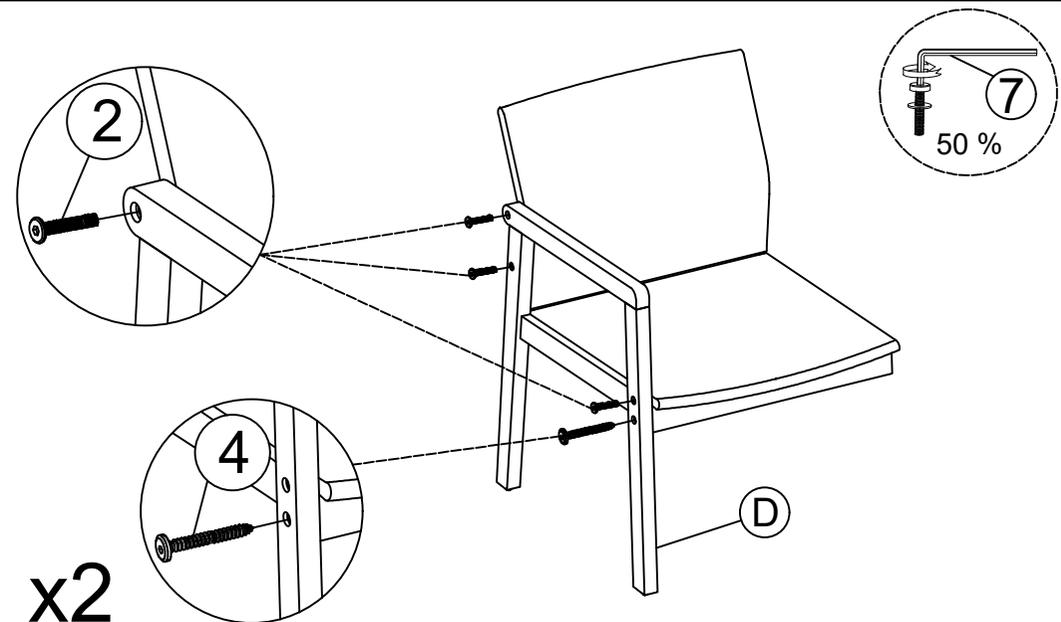


x2

Step 4: Connect the part from Step 3 & Right Armrest (D) by Bolt (2), Screw Bolt (4) with Allen Key (7).

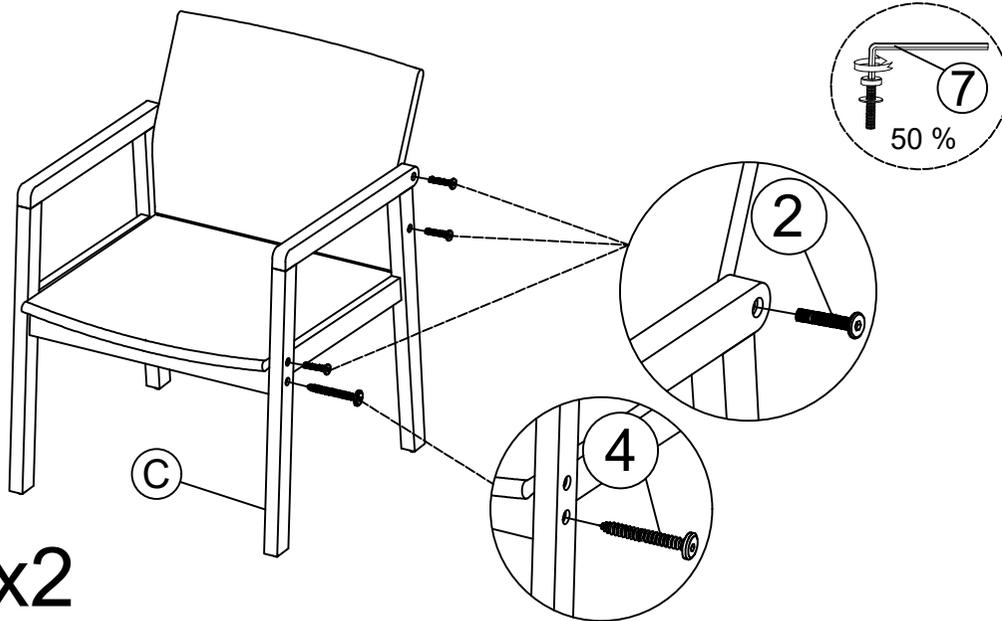


x2

Step 5: Connect the part from Step 4 & Left Armrest (C) by Bolt (2), Screw Bolt (4) with Allen Key (7).

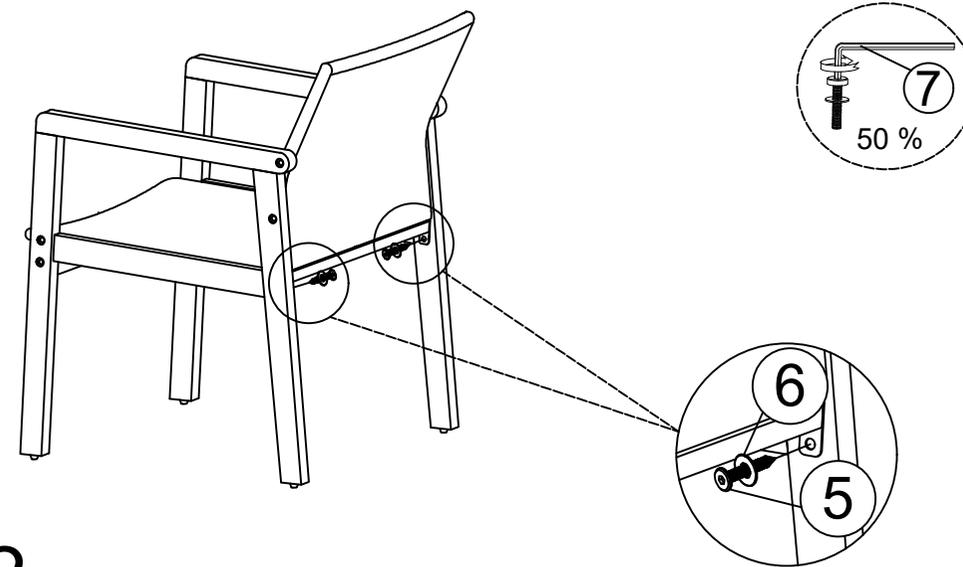


x2

Step 6: Connect the part from Step 5 & Screw Bolt (5), Flat Washer (6) by Allen Key (7)

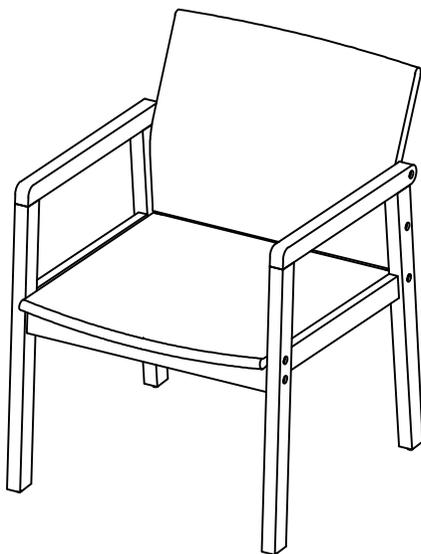


x2


Step 7: Put the Chair upright and make sure all legs are level, then firmly tighten Bolts, Screw Bolt with Allen Key (7) to finish Chair.

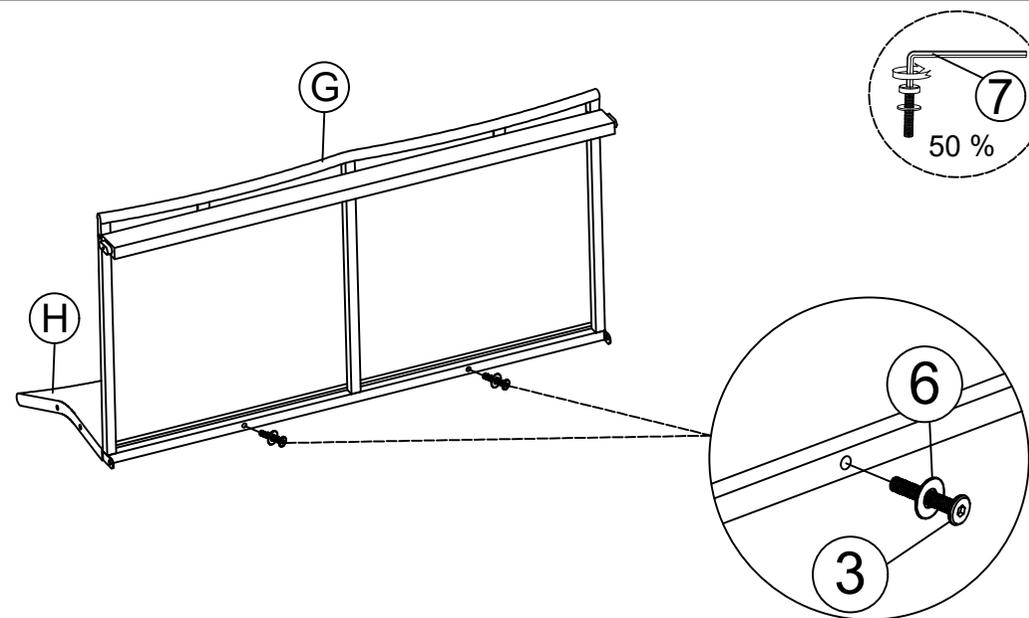


Step 8 : Connect The Seat Bench (G) & Back Bench (H), tighten Bolt (3) , Flat Washer (6) with Allen Key (7).

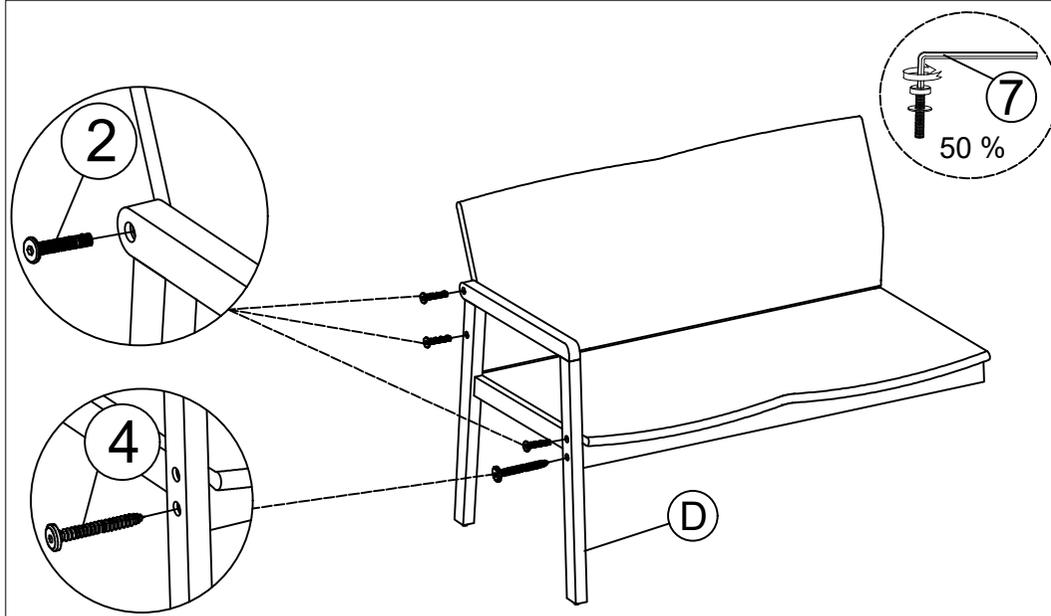


Step 9: Connect the part from Step 8 & Right Armrest (D) by Bolt (2),Screw Bolt (4) with Allen Key (7).

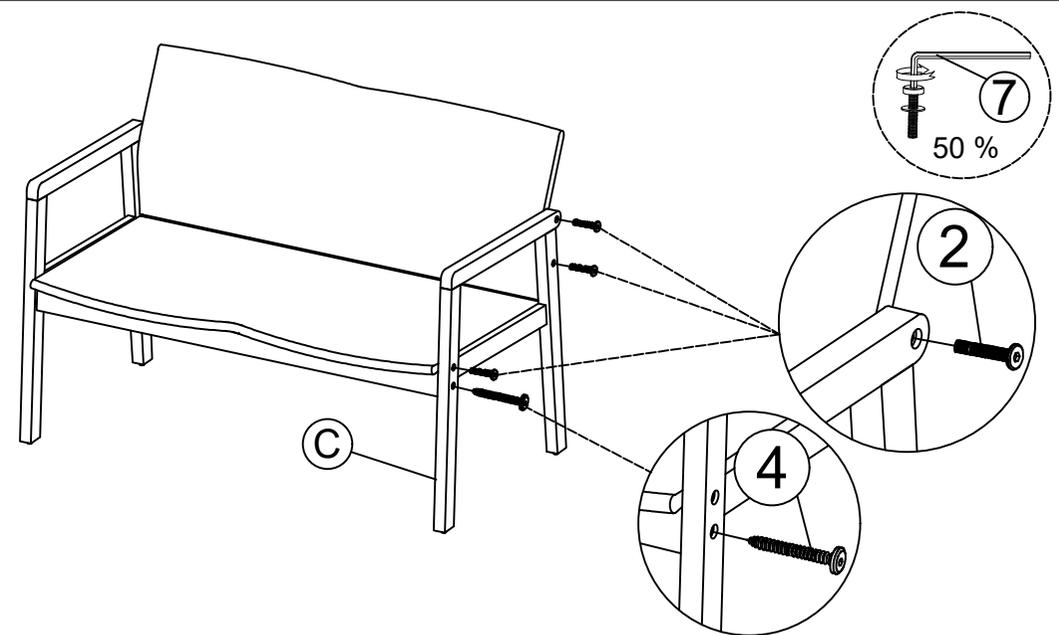

Step 9: Connect the part from Step 8 & Left Armrest (C) by Bolt (2),Screw Bolt (4) with Allen Key (7).

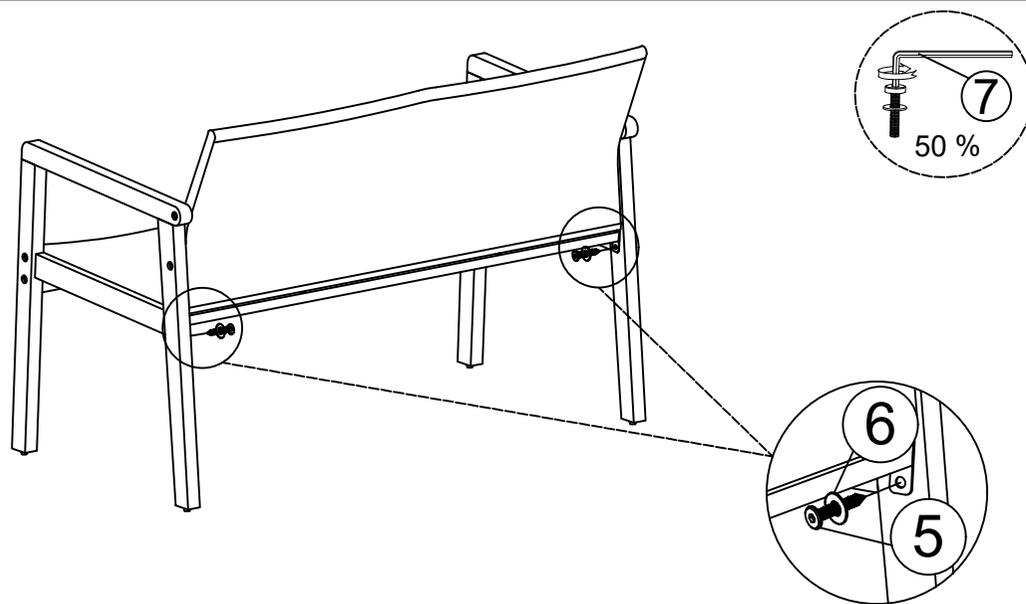

Step 10: Connect the part from Step 9 & Screw Bolt (5), Flat Washer (6) by Allen Key (7)

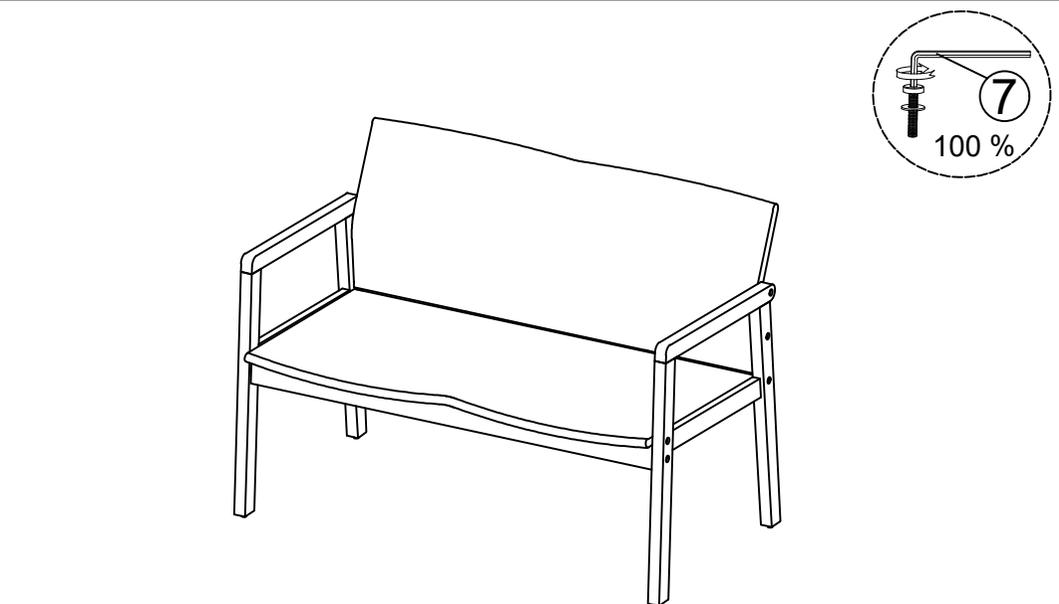

Sep 11: Put the Bench upright and make sure all legs are level, then firmly tighten Bolts, Screw Bolt with Allen Key (7) to finish Bench.

